

Work Order ID 162513

Wednesday, June 07, 2017 8:42:24 AM

162513

Page 1

Item ID: D350-616-011 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Full Emergency Litter
Start Date: 6/15/2017 Start Qty: 1.00 ***1*** Cust Item ID:
Required Date: 6/22/2017 Req'd Qty: 1.00 ***1*** Customer:
Reference:

Approvals: Process Plan: **DAS 21 9-89** Date: **JUN 07 2017** Tooling: Date: Run Start ***NR1***
QC: **DAS 21 9-89** Date: SPC (Y/N): Date: Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D350-616	H	DAS 6 9-89 Label				DAS 27 9-89			
100	Document Control	0.00							
100									
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy bluefile and create labels per PPP D350-616-011 CHG007								JUL 05 2017
101		0.00							
101									
Small Fab	Memo	0.48							DAS 19 9-89
Small Fab	1- Assemble as per Dwg D2370								JUL 05 2017
	2- Transfer drill using D4812-041 as template and open to size 0.257" as per Dwg D2370 AND DT9935 DRILL JIG								
	3- Ensure fit of D4812-041 and remove for shipping								
	D4812-041 MUST STAY WITH LITTER FRAME								
	4- Deburr								

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐				
OTHER : ☐									

Work Order ID 162513

Wednesday, June 07, 2017 8:42:24 AM

162513

Page 2

Item ID: D350-616-011 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Full Emergency Litter
Start Date: 6/15/2017 Start Qty: 1.00 ***1*** Cust Item ID:
Required Date: 6/22/2017 Req'd Qty: 1.00 ***1*** Customer:
Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
105 *105* QC Quality Control	QC5- Inspect part completeness to step on W/O Memo	0.00 0.02				1			DAS 38 9-89 JUL 05 2017
119 *119* Packaging Packaging	Pick Kit Memo	0.00 0.01							JUL 05 2017 DAS 28 9-89
120 *120* QC Quality Control	QC4- 100% Inspect kits for completeness Memo	0.00 0.03							DAS 27 9-89 JUL 05 2017

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐																																																													
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																																																										
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval																																																									
Root Cause		FAULT CATEGORY																																																															
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐	Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐	Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐	Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐	Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐	Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐	Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐	Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐	LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐	Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐	Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____			
Misidentified ☐	Past Due ☐																																																																

Work Order ID 162513

Wednesday, June 07, 2017 8:42:24 AM

162513

Page 3

Item ID: D350-616-011

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Full Emergency Litter

Start Date: 6/15/2017 Start Qty: 1.00

1

Cust Item ID:

Required Date: 6/22/2017 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130	Identify as per dwg & Stock Location: _____	0.00							
130						DAS			
Packaging	Memo	0.00				27			
Packaging	Identify and pack for shipping as per PPP D350-616-011					9-89			
	Location: _____								
	PPP Rev: <u>fg 038</u>								
140	QC21- Final Inspection - Work Order Release	0.00							
140									
QC	Memo	0.10							
Quality Control									

JUL 05 2017

17/7/6

JUL 06 2017

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐								
Misidentified ☐	Past Due ☐	OTHER :							

Monday, June 05, 2017 9:28:40 AM

Page 1

162513

D350-616-011

Required Date: 6/22/2017

Required Qty: 1.00

Comments: IPP E03.04.04ReformatKJ/RF
IPP Rev:F 08-12-10 rev.E as per dwg DD verified by:ec IPP REV:G
13.05.21 AS PER DWG REV.G DD VERF:JLM IPP REV:H 16.04.19
NOW @ CHG007 DD VERF:JLM

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D2370-1		Manufactured	No			101	Each	1.0000	1	1			
D2370-1 Litter Frame Assembly DAS 27 9-89 Location st641 156105 Loc Qty 1 1 Loc Code													
D350-616-013		Manufactured	No			101	Each	0.0000	1	1			
D350-616-013 Deck Plate & Tie Down DAS 27 9-89 Location st641 156105 Loc Qty 1 1 Loc Code													
D4812-041		Manufactured	No			101	Each	0.0000	1	1			
D4812-041 Patient Stop Assembly DAS 27 9-89 Location st641 156105 Loc Qty 1 1 Loc Code													

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____


Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐								
Misidentified ☐	Past Due ☐	OTHER :							

ITEM	QTY	P/N	DESCRIPTION
	X	D2370-041	LITTER ASSEMBLY
1	1	D2370-1	LITTER FRAME ASSY
2	1	D4812-041	PATIENT STOP ASSY

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 162573 MJS
1706-07

D2370-1 LITTER FRAME ASSEMBLY

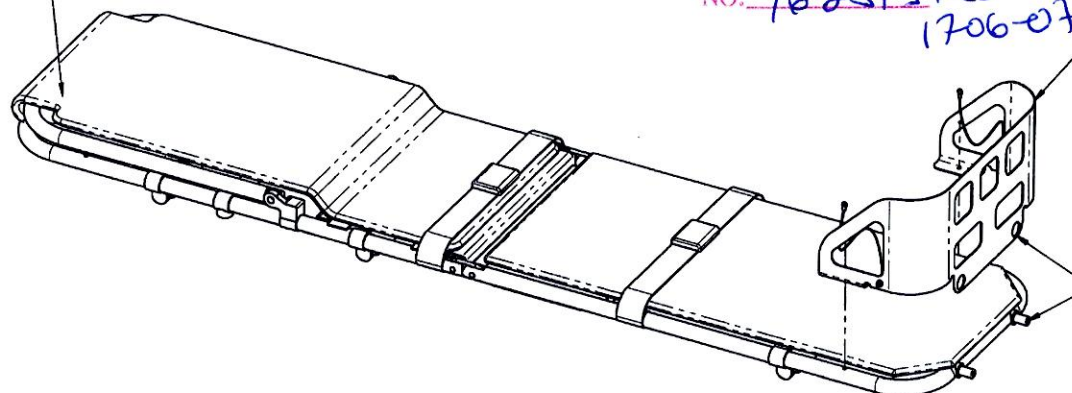

D4812-041 PATIENT STOP ASSY

POSITION PATIENT STOP OVER
FWD STUDS AND SECURE
WITH PIP PINS


D2370-041 LITTER ASSEMBLY

RELEASED
2013-05-16

- NOTES:
1) MATERIAL: N/A
2) FINISH: NONE
3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
4) UNITS: INCHES UNLESS OTHERWISE NOTED
5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
6) IDENTIFICATION: N/A
7) WEIGHT: 25.73 Lbs

D	Ø0.257 HOLES WERE Ø0.191 HOLES, 2PL (ZN C3-2), CREATED -1 AND -041 ASSEMBLIES, NEW DWG FORMAT	DB	13.03.27
C	ADD ALTERNATE FOR D2484, MS SCREWS, TAPPED HOLES AND 5.00 WAS 5.34	KE	06.11.21
B	ADDED Ø0.191 HOLES	KE	98.06.09
A	NEW ISSUE	NA	95.02.20
REV.	DESCRIPTION	BY	DATE
DESIGN	DB		
DRAWN	DB		
CHECKED	<i>A.P.</i>		
MFG. APPR.	<i>[Signature]</i>		
APPROVED	<i>[Signature]</i>		
DE APPR.	<i>[Signature]</i>		
DATE	13.03.27		
DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA DRAWING NO. D2370 REV. D SHEET 1 OF 2 TITLE LITTER ASSEMBLY SCALE NTS COPYRIGHT © 1996 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

ITEM	QTY -1	P/N	DESCRIPTION
	X	D2370-1	LITTER ASSEMBLY
1	4	D2374	STUD
2	4	D2378	MOUNTING BOLT
3	2	D2379	RESTRAINT BELT
4	1	D2381-1	LITTER FOOT PAD
5	1	D2381-3	LITTER HEAD PAD
6	4	D2484	LOCK NUT
7	1	D2485	LITTER FRAME
8	4	AN960JD416L	WASHER

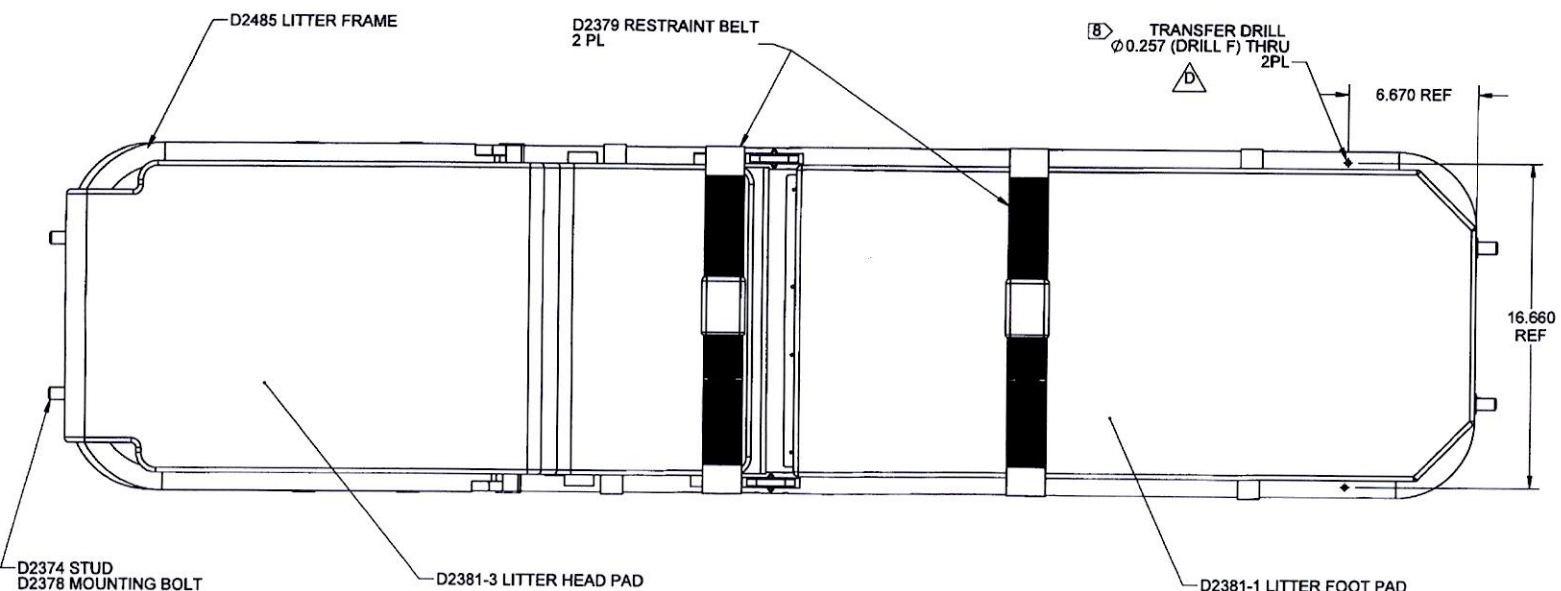

D2370-1 LITTER ASSEMBLY

RELEASED
2013-05-16

- NOTES:
- 1) MATERIAL: N/A
 - 2) FINISH: NONE
 - 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
 - 4) UNITS: INCHES UNLESS OTHERWISE NOTED
 - 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
 - 6) IDENTIFICATION: IDENTIFY WITH DART P/N "D2370-1" USING A REMOVABLE TAG AS PER QSI 044 METHOD 6.6
 - 7) WEIGHT: 24.69 Lbs
 - 8) TRANSFER DRILL USING D4812-041 AS TEMPLATE. ENSURE FIT AND REMOVE FOR SHIPPING

DESIGN	DB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA DRAWING NO. D2370 TITLE LITTER ASSEMBLY COPYRIGHT © 1996 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.
DRAWN	DB	
CHECKED	A.P.	
MFG. APPR.	2/	
APPROVED	1/2	
DE APPR.		REV. D
DATE	13.03.27	SHEET 2 OF 2
		SCALE NTS

Work Order ID 162513

162513

Page 1

Wednesday, June 07, 2017 8:42:24 AM

Item ID: D350-616-011 Accept *N900040100* Setup Start *NS1*
 Revision ID: Stop *NS2*
 Item Name: Full Emergency Litter
 Start Date: 6/15/2017 Start Qty: 1.00 *1* Cust Item ID:
 Required Date: 6/22/2017 Req'd Qty: 1.00 *1* Customer:
 Reference:

Approvals: Process Plan: _____ Date: JUN 07 2017 Tooling: _____ Date: _____
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____
 Run Start *NR1*
 Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D350-616	H								
100	Document Control	0.00							
100									
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy bluefile and create labels per PPP D350-616-011 CHG007								
101		0.00							
101									
Small Fab	Memo	0.48							
Small Fab	1- Assemble as per Dwg D2370								
	2- Transfer drill using D4812-041 as template and open to size 0.257" as per Dwg D2370 AND DT9935 DRILL JIG								
	3- Ensure fit of D4812-041 and remove for shipping								
	D4812-041 MUST STAY WITH LITTER FRAME								
	4- Deburr								

DAS
5
9-89

JUN 22 2017